

**Stop! Set up counter where you need to use it.  
Counter is not designed to be moved after set up.**



Finished case-to-counter.




- 1 Choose location and unpack contents.



- 2 Position case and lid components as shown. **Remember to place them in the exact location counter will be used.**



- 3 With **fluted side inward**, put tambour in position by wrapping around bottom and top of case components.

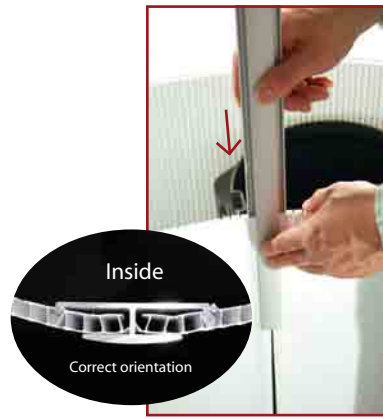

- 4 Connect ends of tambour securely with the aluminum connector. Be sure rounded edge of connector faces outward.  
*Note: If you have a printed tambour graphic you can skip steps #5 and #6.*




- 5 Start at top and begin to slide printed fabric wrap down over the tambour. The elastic side goes to the bottom.



- 6 Tighten nylon cord at top of fabric graphic to help eliminate wrinkles and slack on your fabric graphics.



- 7 Place the lid onto the top of the tambour. See next picture for details.

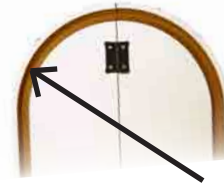

Fit the tambour into the slot around the perimeter on the under side of the lid by starting at one end and working all around.